

Connecting an Maglock to a



Coding Transmitters:

When coding the radio transmitters into the Altair control panel do not use the *Add Start* menu. Instead, scroll down to the *Add 2ch* menu and code each of the transmitters in using this part of the menu.

Connecting the Maglock:

- Follow Diagram below
- Set Maglock downtime using trimmer.

