



RIGEL 5 QUICK START GUIDE

1, 2, 3 Easy steps to programming your new control panel.



1. Change language to English.

- To enter the programming mode press the OK button twice The screen should show **PARAN**.
- Press the minus button until **L INQUIR** appears on the screen, then press OK.
- Press the minus key until **ENG** appears, then press OK.






2. Set Parameters & Logic Values

- To enter the programming mode press the OK button twice The screen should show **PARAN**.
- Press OK and change the values to suit your requirements.
- As a minimum you need to change the following;
 - **work t Not 1**
 - **work t Not 2**
 - **tcr**
 - **Not torque**
- Once you have changed the necessary parameters press the plus and minus button together to go back to the main menu and press minus, the screen should show **LoG ic**

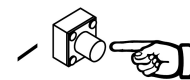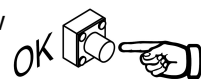


- Press OK and turn on the features required.
- As a minimum you need to have the following on

- **tcr**
- **1bl oPEN**
- **2 STEP**
- **Photoc. oPEN**
- **rAd io ProG**
- **1 Not. on** (only if a single leaf gate)

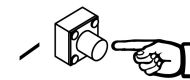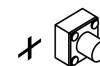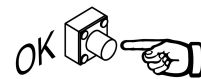

3. Setting up Radio Keyfobs.


- To enter the programming mode press the OK button twice, the screen should show **PARAN**.

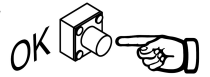

- Press the minus button until the screen shows **LOG IC** then press OK.



- Press the minus button until the screen shows **rAd Io ProG** then press OK.

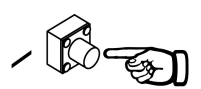

- Press the plus button so that the screen shows **[on]** then press OK.

- Press the plus and minus keys together so that the screen says **LOG IC**.

- Press minus until the screen shows **rAd Io** then press OK.



- The screen will show **Add StArt**, press OK to confirm.

- The words **h iddEn bUtton** are shown on the screen, press the small button on the back of the transmitter and then release.

- The words **dES IrEd bUtton** are shown on the screen, press the button you wish to open the garage door and then release.

- Repeat the last three highlighted steps for all the desired transmitters.

- To exit programming press the plus and minus keys together twice.

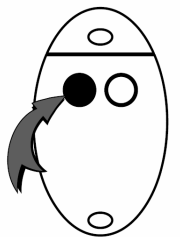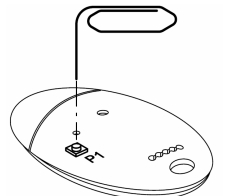

Notes:

- ✓ Use terminals 30 and 31 for wiring any access control
- ✓ Don't forget to leave your customer the simple one page radio coding sheet.